LITETRONICS[®]

Yoke Mount for Flood Lights (FLAYM1, FLAYM2, FLAYM3, FLAYM4, FLAYM5)

Installation Instructions

Compatible Models FL0601 - FLAYM1 FI 1001 - FI AYM2 FL1501 - FLAYM3 FL2552 - FLAYM4

FL3302 - FLAYM5

SAFETY INSTRUCTIONS AND WARNINGS

- · When using electrical equipment, basic safety precautions should always be observed
- This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved
- Installation should only be conducted by a gualified electrician in accordance with NEC and any relevant local building codes.
- Be certain electrical power is OFF before and during installation and maintenance.
- To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or sharp objects.

WHAT COMES IN THE BOX

Installation Instructions

Yoke Mount

REQUIRED TOOLS

Allen Wrench

Part No.	Screw Size	Ground Washer	Flat Washer	Spring Washer
FLAYM1	M6*12 (x2)	M6 (x1)	M6 (x2)	M6 (x2)
FLAYM2, FLAYM3	M4*10 (x2), M6*12 (x2)	M6 (x1)	M4 (x2), M6 (x2)	M4 (x2), M6 (x2)
FLAYM4, FLAYM5	M8*18 (x4)	M8 (x1)	M8 (x4)	M8 (x4)

INSTRUCTIONS


FL0601


FI 1001 - FI 1501


Before Installation, carefully remove all parts from the packaging. Inspect product for defects due to shipping. Always turn off the power supply from main circuit breaker first!

FLOOD LIGHT YOKE INSTALLATION

  1. Run the input wire through the hole in the yoke mount (watch out not to scratch the wire). See below for correct fixture and yoke mount.



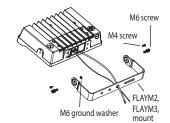




2. Install the mount and keep screws loose.

FL0601

 x2 M6 screws x2 Spring washer x2 Flat washer x1 M6 Ground washer



FI 1001 - FI 1501

x2 M4 screws x2 M4 Spring washer x2 M4 Flat washer x1 M4 Ground washer

x2 M6 screws x2 M6 Spring washer x2 M6 Flat washer x1 M6 Ground washer

FI 2552 - FI 3302


x4 M8 screws x4 M8 Spring washer x4 M8 Flat washer x1 M8 Ground washer






YOKE MOUNT INSTALLATION

- 1. Finish the wire connection accordingly (refer to flood light installation instructions for wiring diagram).
- Align the fixture to required angle. Tighten M6 or M8 screw after angle is confirmed. (Figure 1)
- 3. Turn power back on.
- Note: Adjustable angle is 0~+/-90 °. (Figure 1)

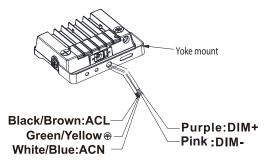

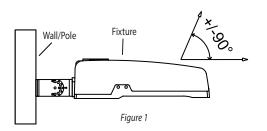

Thank you for choosing

6969 W. 73rd Street

Bedford Park, IL 60638

WWW.LITETRONICS.COM

CustomerService@Litetronics.com or 1-800-860-3392



The information and product specifications contained in these instructions are based upon data believed to be accurate at the time of printing. This information is subject to change without notice and without incurring liability. If you have questions regarding specific product details, please contact us at 800-860-3392 or via email at customerservice@itteronics.com. To check for an updated version of these instructions, please visit www.litetronics.com.